

## PRODUCT OVERVIEW



SPECIFICATIONS

US/AU/UK/EU Plugs

LED Indicator
LED solid:
LED solid:
normal operation.
LED does not light
1:0 does not lig

2 Adapter can plug into Type A,B,C,D,E,F,G,H,I,J,K,L,M,N and O outle 

1 Adapter can accept Type A, B, C, E, F, G, I, J, L, N plugs.

Please notice that type D,H,K,M and O plugs are not accepted. 

## APPLICABLE OUTLETS

The product is suitable for use with most electronic devices up to 2500W at 250V and 1000W at 100V. It can be used with a multitude of appliances such as:Laptops,Small travel hair dryers,Travel irons,Electric fan,Table lamp,

lease check the safety data sheet or data plate on the device to find this nformation before plugging it in.



USB DEVICES

2-POLE UNEARTHED DEVICES





Attentions:



Built-in multi-nation plugs can be selected to fit all outlets in different co

HOW TO USE THE ADAPTER

Safety function switch ensure only one plug energized.

completely as shown make sure the contact blades are turned to Recover the plug: press and hold the "USA" button to release a continue to pull up, until the plug completely pull the top and ther

Use USA Plug release the button, then the button will reset and lock the plug.

Use AUS Plug

Recover the plug: press and hold the "UK" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and

the plug.

lock the plug.

to the parallel position.

Slightly press the button and slide to the down for EU plug completely as shown .make sure the contact blades are turned to the parallel position.

Slightly press the button and slide to the down for AUS plug

completely as shown make sure the contact blades are turne

Recover the plug: press and hold the "AUS" button to release

and continue to pull up, until the plug completely pull the top

completely as shown. Pull out the insulated ground pin from

Recover the plug: press and hold the "EU" button to release and continue to pull up, until the plug completely pull and lock the plug.

3

Cameras Smartphones Tablets Portable Game Console

4

5

Slightly press the button and slide to the down for USA plug

## REPLACEMENT OF THE FUSE



water flowed out.

2. Take out 2, and put 2 into the original position of 1, the adapter could

work again. 3. You also could change standard: 250Vac 10A,

Notes:

1. You should remove all the device before you change the

2.Please confirm whether there are water flowed out from the access equipment in the power rating. 3.Please confirm whether the product is wet and there is

CAUTION

 Always disconnect Adapter from the outlet when not in use. Always disconnect Adapter from the dutlet when not in use.
 Before use, please read this instruction carefully! This product does not convert voltage(AC-AC), in order to avoid possible damage to your device or other safety hazards, please make sure the power outlet you intend to use has the proper voltage to run your device before using this adapter.

Indoor use only.

Misuse can lead to electrical shock. The length of the USB cable should be less than 3M.

The length of the USB cable should be less than 3M.
The travel adaptor is for temporary use only and that it shall not be used permanently.
Against inserting an adaptor into another adaptor shall be provided by the manufacturer.
No grounding, This product is for use with unearthed or double insulated appliances only.

**COMPATIBLE COUNTRIES** 

EU PLUG:

AUS PLUG: A American San Argentina Australia C China

Syria Thailand

USA PLUG:

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.











8 9 10 11 12

> 品号 2023/03/01 日期 V1.0 版本 制图 梁瑜 审核 核准