

PORODO
LIFESTYLE



Porodo Lifestyle
Meat and Vegetable
Electric Food Chopper

SKU: PD-LFST045

Table of Contents


Features	2
Schematic View	2
Instructions for Use	3
Operation Time Table	4
Specifications	5
Safety Precautions	5
Cleaning and Maintenance	7
Troubleshooting	7
Warranty	8
Contact Us	8

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Features

1. The motor overheating protection ensures safe and reliable operation.
2. The food-grade cup is made from high-quality, safe materials that are easy to clean and maintain hygiene.
3. Detachable parts simplify cleaning and maintenance.
4. The planetary gearbox with variable speed provides stable operation with low noise, offering strong performance without tangling.
5. The food scrapers are included to easily remove food from the cup for added convenience.

Schematic View

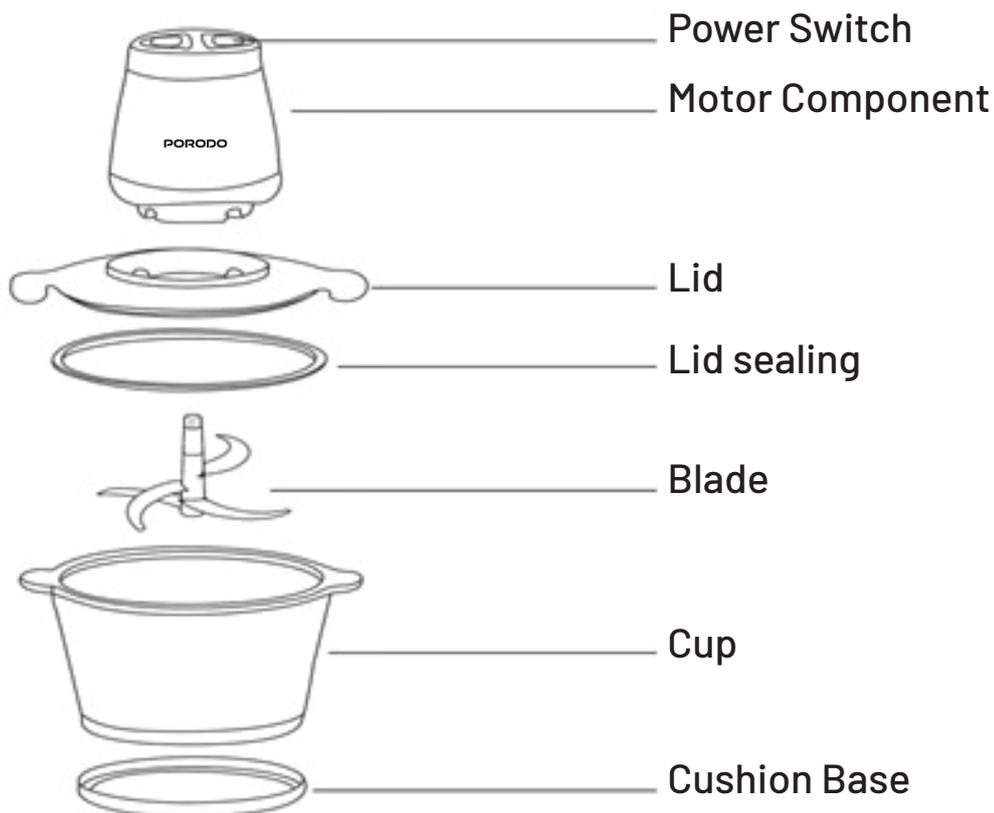

Note:

1. Do not forget to install the lid sealing ring.
2. The plastic cup body does not include the lid sealing ring or shock-absorbing coasters.

Instructions for Use

1. Before first use, thoroughly wash all parts that will come into contact with food.
2. To operate the machine, press the power switch. The machine will begin working. Release the switch to stop it.
3. Remove any tendons, bones, and skin from the meat before processing.
4. Place the meat knife into the cup. Cut ingredients into 1-2 cm pieces and add them to the cup. Vegetables and fruits can also be added.
5. Ensure you add the right amount of water, keeping the total volume below half of the cup's capacity. Exceeding this amount may affect both the crushing efficiency and the lifespan of the product.
6. Secure the lid properly and ensure it is positioned correctly. Place the motor unit onto the cover and make sure it is fully seated.
7. The product offers both fast and slow speeds. Choose the appropriate speed based on the food being processed. Use the fast speed for meat and the slow speed for vegetables and fruits.
8. Turn on the power and press the switch to begin operation. For inching operation, press and hold the switch for 3 seconds, then release for 2 seconds. Repeat the operation at least three times before continuous operation.
9. For continuous operation, do not exceed the rated working time, as indicated in the provided operation time table, to avoid damaging the product.
10. Disconnect the power supply once processing is complete. Wait for the blade to stop rotating, then remove the motor unit and open the transparent cover. Take out the blade.
Note: If ingredients stick to the cup, turn off the power and disconnect the machine. Use a scraper or chopsticks to remove the ingredients before continuing.
11. Do not use the meat chopper for dry and hard foods such as soybeans or uncooked rice.
12. If the machine shakes due to uneven ingredient distribution, stop the machine, redistribute the ingredients evenly, and then resume operation.
Note: If the desired result is not achieved within 15 seconds, release the power switch and allow a 10-20 second interval before resuming processing. This will help extend the product's lifespan.

Operation Time Table

Food	Instructions	Chopping Frequency	Operating Period
Pork	Remove the bone and skin. Cut into average pieces.	3 times	3 to 5 seconds
Beef	Remove the bone and skin. Cut into average pieces.	3 times	3 to 5 seconds
Onions	Cut into four pieces	4 times	3 to 5 seconds
Green Chinese Onion	Cut into pieces that fit inside the cup.	4 times	3 to 5 seconds
Chili	Cut into 4cm pieces.	4 times	3 to 5 seconds
Carrot	Cut into 2cm pieces.	4 times	3 to 5 seconds
Tomatoes	Cut into four pieces	2 times	3 to 5 seconds
Vegetables	Cut into 3cm pieces.	4 times	3 to 5 seconds
Potatoes, Taro	Cook and peel off.	4 times	3 to 5 seconds
Fruit	Cut into 2cm pieces.	2 times	3 to 5 seconds
Egg	Remove the shell.	1 time	3 to 5 seconds
Peanut (Roasted), Walnut	Remove the shell.	3 times	5 to 10 seconds
Nuts	Remove the shell.	3 times	5 to 10 seconds
Bread Crumbs	Press or use flat bread crumbs.	2 times	3 to 5 seconds
Ham Sausage	Cut into 3 to 4cm pieces.	1 time	5 to 10 seconds

Notes:

1. Press the switch for 3 seconds to start, then release it for 2 seconds before pressing again for cyclic use.
2. The maximum time to press the switch should not exceed 5 seconds. This method is suitable for operation.
3. Avoid continuously pressing the switch on and off.

Specifications

Rated Voltage	220-240V
Rated Frequency	50/60Hz
Motor Power	400W
Motor Type	5430 Pure Copper
Power Plug	UK 3-Pin Plug
Capacity	3L

Safety Precautions

1. Always disconnect the power supply before disassembling, installing, or adjusting any part of the product.
2. Before use, inspect the power cord, plug, and other components for any signs of damage. If any damage is found, stop using immediately and contact a professional service center.
3. Ensure that the knife rest and skein meat parts are properly installed and functioning freely before adding ingredients.
4. Never operate the appliance with an empty cup (i.e., no food inside) or overload it with ingredients.
5. Do not add ingredients with temperatures below or above 50°C, and avoid placing the cup in a microwave for use or disinfection to prevent breakage.
6. The appliance is not suitable for processing hard food materials such as coffee beans, dried soybeans, or similar items.
7. Adhere strictly to the recommended operating time. Continuous use should not exceed 15 seconds.
8. After completing processing, wait for the motor and blade to stop rotating, and ensure the power is disconnected before removing the motor.
9. If the appliance stops during operation due to the motor's overheating protection, turn off the switch, disconnect the power, and allow the unit to cool for 20-30

minutes before resuming use.

10. Do not submerge the motor in water or other liquids, nor wash it under running water or other liquids.

11. Avoid using corrosive cleaning agents (e.g., gasoline) to clean the product.

12. Do not place any parts of the product in a dishwasher for cleaning.

13. Keep the appliance out of the reach of children. It should not be used by individuals who are physically unfit, mentally impaired, or lack relevant experience and knowledge.

14. This appliance is intended for personal or household use only and is not suitable for commercial applications.

15. Keep the appliance and its components out of the reach of children, infants, and pets.


16. This product is for household use only.

17. Do not expose the motor component to water.


18. Do not immerse the product or the Motor in water. Only wash the cup and blades.



DANGER! The blade is sharp and it can cut your hand.

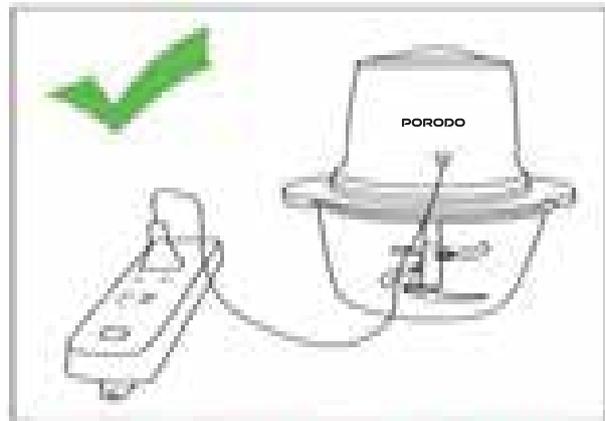

Correct Connection Method

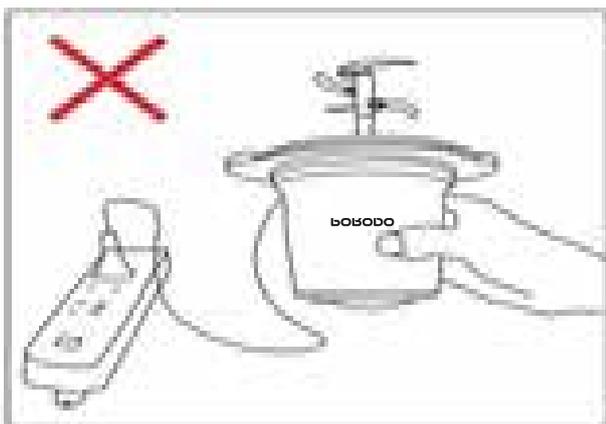

Incorrect Connection Method



Incorrect Connection Method

19. The meat mincer blade is sharp; please handle with care to avoid injury while using the product.

Note: The cutter can only be connected to the motor unit when it is properly placed into the cup body and securely covered.

20. Never connect the cutter and motor unit separately under any circumstances.

Cleaning and Maintenance

1. Always disconnect the power supply and remove the motor unit before cleaning the product.

2. Clean the product promptly after each use to maintain optimal performance.

3. Rinse the cup and accessories with water, then wipe them dry. Exercise caution as the blade is very sharp.

4. Wipe the exterior of the motor unit with a damp cloth. Never immerse the main body in water or any other liquid.

5. Store the product in a dry place, away from direct sunlight.

6. Ensure the product is both clean and dry before storing.

Troubleshooting

Problem	Possible Causes	Solution
During first uses the motor emits strange odor.	The motor is new and a slight odor is normal.	If the product continues to emit an odor after repeated use, please take it to a repair center for inspection
The appliance stopped working.	1. Low voltage. 2. Motor temperature protection activated.	1. Check if the voltage is too low. 2. Allow the product to rest for 20-30 minutes before using it again.
The product vibrates abnormally and emits loud noise.	1. The blade is not installed properly. 2. Product is not placed on stable surface. 3. The input voltage is too high. 4. The appliance has overheated.	1. Remove the ingredients and ensure the skein knife rest is properly installed. 2. Ensure the product is placed on a stable surface. 3. Check if the voltage is too high. 4. Turn off the switch, disconnect the power supply, and remove any excess ingredients.
The blade does not move.	The blade is stuck in food ingredients.	Turn off the switch, disconnect the power, and remove the ingredients. Cut the ingredients into smaller pieces before resuming use.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**