

PORODO
LIFESTYLE



Porodo Lifestyle
Powerful Hand Blender
Food Chopper and Whisker

SKU: PD-LFST117

Table of Contents

Safety Precautions	2
Schematic View	4
Before First Use	5
Blender Instructions	5
Chopper Instructions	6
Whisker Instructions	7
Specifications	8
Cleaning Instructions	8
Disposal	9
Warranty	10
Contact Us	10

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Safety Precautions

Before using the appliance, always adhere to the following essential safety precautions:

- 1.** Thoroughly read all instructions before using the appliance.
- 2.** Ensure that the voltage of the wall outlet matches the voltage specified on the appliance's rating plate.
- 3.** Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions, is dropped, or sustains any form of damage. In such cases, return the appliance to the nearest authorized service center for inspection, repair, or any necessary electrical or mechanical adjustments.
- 4.** If the power supply cord is damaged, it must be replaced by the manufacturer, an authorized service agent, or a qualified technician to avoid any potential hazards.
- 5.** Always disconnect the blender from the power supply when left unattended, and before assembling, disassembling, or cleaning the appliance.
- 6.** Ensure the power cord does not hang over the edge of a table or counter, or come into contact with hot surfaces.
- 7.** Never immerse the upper part of the blender in water to prevent the risk of electrical shock.
- 8.** Close supervision is necessary when the appliance is being used near children or individuals with limited physical or mental capabilities.
- 9.** Keep hands and utensils away from the moving parts of the blender to reduce the risk of injury.
- 10.** Always keep hands and utensils out of the container while blending to prevent severe injury or damage to the blender. A scraper can be used, but only when the blender is not running.
- 11.** The appliance is not designed for chopping ice or blending hard, dry ingredients,

as this may cause the blade to become dull.

12. To reduce the risk of injury, never place the cutting blade on the base without first ensuring the bowl is properly in place.

13. Ensure that the chopper lid is securely locked in place before operating the appliance.

14. The use of accessories not recommended by the manufacturer may result in injury.

15. Do not use the appliance for any purpose other than its intended function.

16. Children should always be supervised to ensure they do not play with the appliance.

17. This appliance can be used by children aged 8 years and above, as well as by individuals with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, provided they are given supervision or proper instructions on safe usage and understand the associated hazards. Children should not play with the appliance. Cleaning and maintenance should only be performed by children aged 8 and above, and only under supervision.

18. Keep these instructions for future reference.

19. The use of accessories not recommended by the manufacturer may result in injury.

20. Before removing the lid from the jar, release the button and unplug the appliance. Wait until the blades have come to a complete stop before removing the lid.

21. Always remove the blade assembly before pouring the contents from the jar.

22. Be sure to switch off the appliance after each use. Ensure the motor has completely stopped before disassembling the appliance.

23. The metal blades are extremely sharp; handle them with care.

24. Always hold the blade stem, not the cutting edge, when handling or cleaning the blade.


25. Be cautious of potential injury from misuse of the appliance.

Schematic View

Blend


1. Operating Button
2. Turbo Mode
3. Motor Unit
4. Lock
5. Blend Rod

Turn the blend rod anti-clockwise to lock it with the motor unit. To unlock, turn it in the opposite (clockwise) direction.

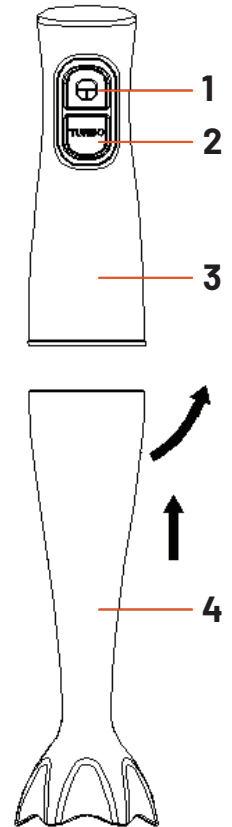


Chop

1. Operating Button
 2. Turbo Mode
 3. Motor Unit
 4. Chopper Lid
 5. Knife Blade
 6. Jar
- The blade is very sharp; handle with care to avoid injury.
- Ideal for preparing small amounts of chopped vegetables, such as carrots, or meat.

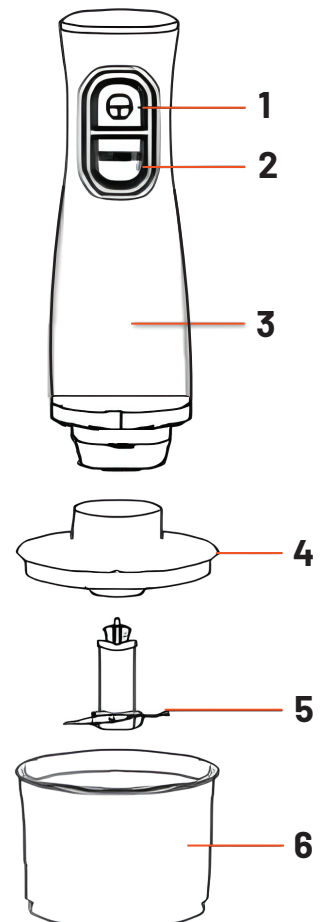

Whisk

1. Operating Button
2. Turbo Mode
3. Motor Unit
4. Lock
5. **Whisk:** Ideal for whisking egg whites.

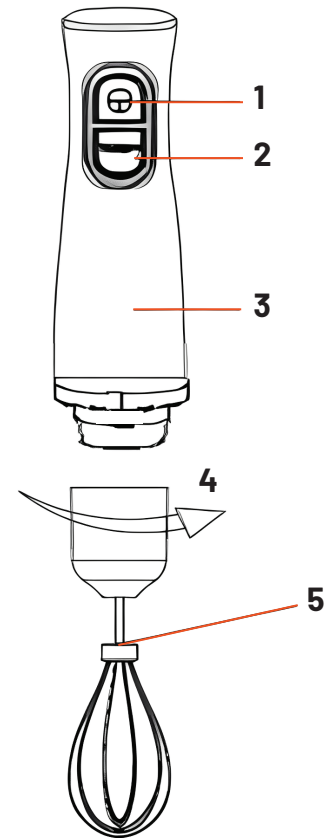

Before First Use

1. Before using the blender for the first time, clean it following the instructions in the "Cleaning Instructions" section.
 2. The blender should not run without load for more than 15 seconds.
- Important:** The blades are extremely sharp; handle with caution. Always ensure that the hand-held blender is unplugged from the power outlet before assembling or removing any attachments.

Blender Instructions

1. The maximum operation time per use should not exceed 30 seconds. After two consecutive cycles, allow the appliance to rest for at least 3 minutes.
2. To assemble the detachable shaft with the motor unit, turn the shaft counterclockwise until it is securely tightened. To disassemble, simply turn the shaft in the opposite (clockwise) direction.
3. Plug the hand-held blender into the power outlet.

4. Submerge the hand-held blender into the food. Press and hold the low-speed or high-speed button to begin operation.
5. To stop the blender, release the low-speed or high-speed button.
6. When blending bananas, cut them into small pieces and place them in the small chopper bowl. Add milk, ensuring the maximum quantity of banana does not exceed 280g and milk does not exceed 420g for each blending session.

Chopper Instructions

1. The maximum operation time per use should not exceed 15 seconds. After two consecutive cycles, allow the appliance to rest for at least 3 minutes.
 2. Place the chopper bowl on a clean, flat surface.
 3. Assemble the stainless steel chopping blade into the chopper bowl, as shown in Figure 1.
 4. Add food into the chopper bowl.
- Note:** Remove the bones from the meat, cut it into small pieces, and place it into the bowl. The maximum quantity of meat should not exceed 200g for each blending session.
5. Attach the lid securely onto the chopper bowl. Ensure that the tuber on the inside wall of the bowl aligns with the groove in the lid. Press down on the lid to lock it into position (see Figure 2). If the lid is not pressed, it will spring open and can be easily removed.
 6. Insert the motor unit into the hole of the chopper lid and press it to lock in place. The motor unit will spring out if not pressed, and you may remove it at that time (see Figure 3).
 7. Submerge the hand-held blender into the food. Press and hold the low-speed or high-speed button to begin operation.
 8. To stop the appliance, release the low-speed or high-speed button on the motor unit.
 9. After chopping, first unplug the appliance from the power outlet. Then, remove the motor unit from the chopper lid by turning it counterclockwise. Once removed,

you can detach the motor unit and lid cover.

Caution:

- a.** To reduce the risk of injury, always ensure the bowl is properly in place before attaching the cutting blade to the base.
- b.** Make sure the chopper lid is securely locked in place before operating the appliance.
- c.** For safety, always disassemble the motor unit from the chopper lid first, then remove the chopper lid. Never attempt to remove the chopper lid while the motor unit is in place.



Figure 1

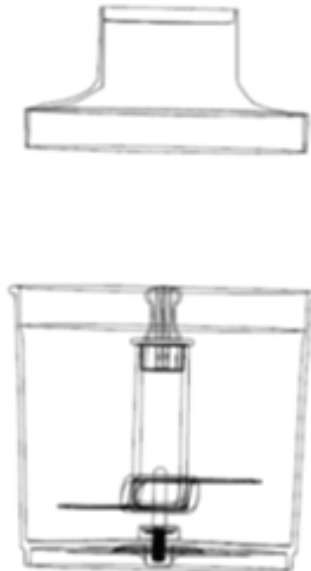 


Figure 2

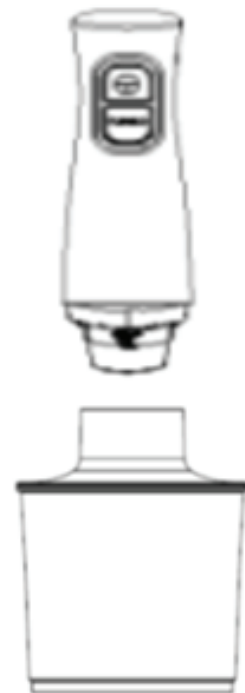 


Figure 3

Whisker Instructions

- 1.** The maximum operation duration per use should not exceed 1 minute. After two consecutive cycles, allow the appliance to rest for at least 3 minutes.
- 2.** To assemble the whisker with the motor unit, turn the whisk counterclockwise until it is securely tightened. To disassemble, simply turn it clockwise.
- 3.** Plug the hand-held blender into the power outlet.
- 4.** Place the egg whites into the cup. Generally, the whites of two eggs are sufficient.

5. Submerge the hand-held blender into the food. Press and hold the low-speed or high-speed button to begin operation.
6. To stop the blender, release the low-speed or high-speed button on the motor unit.

Specifications

Material	PP (Body Material), Stainless Steel SUS301
Bowl Capacity	500mL
Rated Voltage	220-240V
Rated Frequency	50-60Hz
Rated Power	300W
Power Plug	UK 3-Pin
Product Weight	1.2kg
Product Size	65×65×350mm
Model Number	LFS117

Cleaning Instructions

1. Unplug the appliance and remove the detachable stem.
Note: Do not immerse the detachable stem in water, as prolonged exposure may wash away the lubrication on the bearings.
2. Rinse the detachable stem under running water without using abrasive cleaners or harsh detergents. After cleaning, place the stem upright to allow any trapped water to drain out. The stem is dishwasher safe.

3. Wash the cup, bowl, beater, and blade in warm, soapy water. The bowl and beater are not recommended for dishwasher use, as prolonged exposure to the dishwasher's heat may cause deterioration of the plastic components.

4. Wipe the motor unit with a damp cloth. Never immerse the motor unit in water to clean it, as this could result in an electric shock.

5. Dry all components thoroughly.

Caution: The blades are extremely sharp; handle with care.

6. Quick Cleaning: Between processing tasks, place the hand-held blender in a cup half-filled with water and turn it on for a few seconds.

Disposal



This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**