



Porodo Soundtec

POCKET ELITE Speaker and Dialer

SKU: PD-STWLEP051

Table of Contents

Overview	2
Package Contents	2
Specifications	3
Bluetooth Connection Guide	3
App Guide	4
1. App Installation	4
2. Connection Methods	5
Status Bar Description	5
Interface Operation Guide	5
Music Function	6
Album Function	7
Alarm Function	8
Call Function	8
Timer Function	9
Calculator Function	9
Weather Function	10
Calendar Function	10
Settings	10
Disposal	12
Warranty	12
Contact Us	12







Note: Ensure the device and its accessories are intact upon unboxing. Check for any physical damage before use.

1. Power Button:

Ensure the product is positioned upright.

Power On: Press the power button once to turn on the device.

 
Power Off: Press and hold the power button to turn off the device.

- 2. Short press to light up, short press again to switch the light color mode, and short press the button again to turn off the light.
- 3. Short press to switch to the previous song, long press to reduce the volume
- 4. Short press to switch to the next song, long press to increase the volume
- 5. Display screen with digital charging display
- 6. TF card slot
- 7. Charging port: Charging time is about 2 hours when using the provided USB cable

Package Contents



Porodo Speaker and Dialer



Cable

Specifications

Battery Capacity	1200mAh		
Bluetooth Version	5.4		
Bluetooth Name	PD-STWLEP051		
Speaker Power	4Ω 5W		
Transmission Distance	15m		
Charging Time	2H		
Charging Port	Type-C		
Working Time	4 to 6H (50% Volume)		
Micro SD Card	16GB Max (Not Included)		
Display Size	2.64"		
SNR	78dB		
Rated Power	5W		
Frequency Range	100Hz to 20kHz		
Product Weight	200g		
Product Size	41.5 x 59 x 80mm		
Model Number	PD-STWLEP051		

Bluetooth Connection Guide

- 1. Press and hold the "" button for three seconds. Release the button when you hear the power-on tone, indicating the speaker is active.
- 2. Open the Bluetooth settings on your phone and search for available devices.
- **3.** Select "PD-STWLEP051" from the list of devices. Wait for the confirmation tone indicating "Connection successful."
- 4. You can now start playing music through your speaker.



1. App Installation

Method 1: Download the application from Google Play or App Store.



For iOS Devices: Go to the App Store and search for "Joy Audio" to download and install the app.



For Android Devices: Open the Google Play Store and search for "Joy Audio" to download and install the app.

Compatible Devices: The app is compatible with iOS, Android, Huawei, Xiaomi, and VIVO devices.

Method 2: Scan the OR code to download

Important: The device does not support simultaneous connection to multiple users.



Joy Audio

Download the app for more personalization



Download

the app

- 2. Connection Methods
- 2.1 Bluetooth Search Connection:
- a. Activate your device's Bluetooth and locate the speaker's name using its MAC address, which can be found in the "About" settings.
- b. Select the speaker to establish a connection.
- 2.2 QR Code Connection:
- a. Activate the speaker.
- b. Access the "Bluetooth QR Code" interface on your device.
- **c.** Open the corresponding app and use it to scan the QR code displayed on the speaker to connect.

Status Bar Description



Bluetooth status display	*	Bluetooth not connected	
	*	Bluetooth connected	
Mobile phone connection status display	9	Mobile phone not connected	
	9	Mobile phone connected	
	Speaker battery level display		
10:43	Time display		

Interface Operation Guide



Main dial interface










Main menu interface

Music interface

Weather interface

Calendar interface

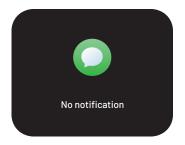

Swipe down to enter the information interface



 
Background switching interface

Music Function

- 1. Bluetooth Music Mode: Wirelessly connect your phone via Bluetooth to play music through the speaker.
- 2. Local Music Mode: Insert an SD card into the speaker to play music files stored on the card.
- **3.** Music Synchronization: Easily transfer your favorite songs from your phone to the speaker's SD card using the app provided. This one-click synchronization function allows for seamless music updates.



Local music mode



Click to play music

- 4. Song Playback Modes:
- 4.1 Sequential Playback: Plays songs in the order they are listed.
- 4.2 Random Playback: Plays songs in a random sequence.
- 4.3 Single Song Loop: Repeats the same song continuously.

- 5. Storage Folders:
- **5.1** Download Folder: Designated storage location for songs transferred via the app.
- 5.2 Photo Folder: Designated storage location for photos transferred via the app.





Mode switch menu

Bluetooth music mode

Connection status between phone and speaker (connected " * " / not connected: " ")

Lyrics display area Play/pause, up and down song control buttons Volume adjustment control





Swipe up to enter the lyrics interface. Swipe down to exit the lyrics interface

Bluetooth not connected prompt interface

Upon encountering this interface, please ensure the following:

- 1. The Bluetooth switch on your device is turned on.
- 2. Your mobile phone's Bluetooth is both activated and successfully connected.

Album Function

Access and browse your local album directly on the speaker using the album application.

- 1. Local Album Storage: You can transfer photos from your mobile phone to the speaker's SD card via the app.
- 2. Customizable Album Display: Personalize the speaker display by setting your favorite album photos as the background, according to your preferences.



Press and hold to enter photo settings



Open Loop Mode: Enable this feature for photos to automatically cycle through. You can set a selected photo as the main dial background, delete a photo, or exit this function.



Click to exit album



If a photo transferred via the app is in an incorrect format, it will not display properly.

It is recommended to delete such photos.


Alarm Function

Users can customize alarms based on their preferences, including setting the alarm time, the number of days it repeats, and toggling it on or off.

- 1. Number of Alarms: Up to five alarms can be set.
- 2. Setting Methods:
- 2.1 Directly on the speaker.
- 2.2 Through the app by accessing the alarm function.



Alarm setting

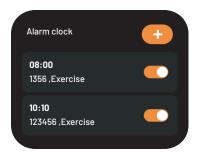

Alarm List



The alarm will turn off immediately.

The alarm will reset in 10 minutes.


Call Function

When Bluetooth is connected, this feature allows users to answer calls, hang up, store frequently used contacts, and access call records.

- 1. Dial Function: Users can dial numbers directly from the speaker's dial pad when Bluetooth is connected.
- 2. Contacts: The speaker can store up to 10 common contacts through the app,


simplifying the process of making calls.

3. Call Logs: This function saves call history for easy access.

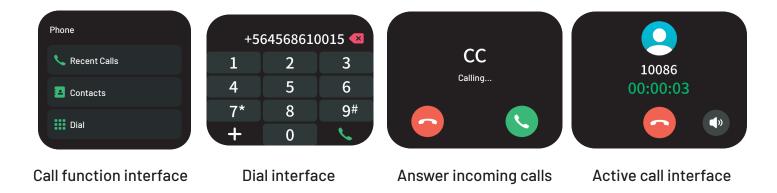

Timer Function

Set a countdown timer for specific durations (1,3,5,10,15,30, or 60 minutes). A sound reminder will be issued once the countdown completes.

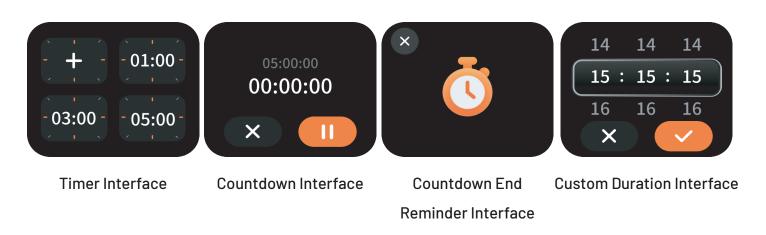

Calculator Function



This feature allows users to perform simple mathematical calculations and view the results immediately.

Timer Function



Once connected to the device, the app automatically synchronizes weather information to the audio weather function interface, enabling convenient access to weather updates for users.

Calendar Function



Users can easily access and view calendar information.

Settings



Bluetooth Switch: Activate this switch to enable connection of the mobile phone's classic Bluetooth. This allows the phone to search for, connect to, and play music via Bluetooth. Manually turning it off will disconnect the Bluetooth and mute the phone's audio.



Adjust the Screen Brightness Level: Increase the level to enhance the screen's brightness.



Screen-Off Dial Function: When activated, a dial will appear after the screen turns off.

Screen-Off Time: Choose the duration the screen remains on before automatically turning off. Options include 1,3,5,10,30 minutes, or the screen can be set to never turn off automatically.



Ringtone Volume: Users can adjust the volume for various tones including the alarm, countdown timer, incoming call, and SMS ringtones. Silent Mode: Activate silent mode to disable all prompt sounds, ensuring no disturbances.



Language Settings: Users can configure the display language, typically set to the native language for ease of use.



Restore Factory Default Settings: Activating this function will clear all current user settings and revert the device to its original factory configuration.



Restart: Selecting this option will restart the device.



Shutdown: Choosing shutdown will power off the device. It is recommended to shut down the device if it will not be used for an extended period.



APP Download QR Code: Users can scan this QR code using a browser or apps to access the official Jingjia website. From there, download the Joy Audio app to unlock additional features.



Device Information: Access detailed information about your device, including its name, model, Bluetooth address, software version, and more.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check: porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: porodo